

# Cycling Refrigerated Air Dryers

Secotec™  
20 - 885 cfm




## Why Do We Need Dry Air?

As atmospheric air is drawn into a compressor, water vapor is introduced as well. During compression, air heats up and is able to hold more water vapor.

Mechanical separators and filters are used to remove liquid water, yet air remains saturated with water vapor. As air travels through the piping, the vapor cools, condenses and may pass into production tools and equipment. Refrigerated dryers condense water vapor and remove the condensed liquid from the air system.

## Why Secotec™?

The Secotec™ cycling control provides maximum efficiency by operating the refrigerant compressor only when necessary. This is achieved by utilizing a thermal storage medium. The refrigerant system cools the medium to a certain temperature, cuts off, and then stands by until the temperature rises to a predetermined level before switching on again. Therefore, the dryer is not wasting energy when the demand is low. A non-cycling dryer continues to operate even during low demand periods.

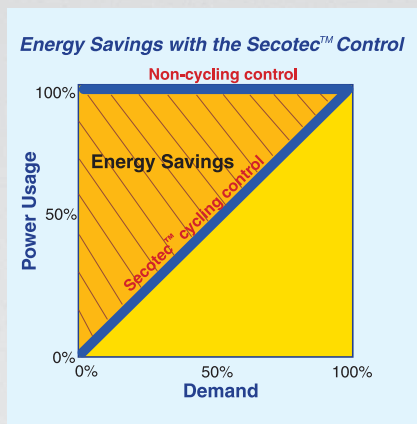


## Energy Savings

The Secotec™ cycling control provides the greatest savings during low demand periods such as evening and night

shift. As shown in the chart, significant savings are possible on a daily basis. During breaks, low demand periods, and shut down, the Secotec™ dryers save

### Air Consumption Over a 24-Hour Period

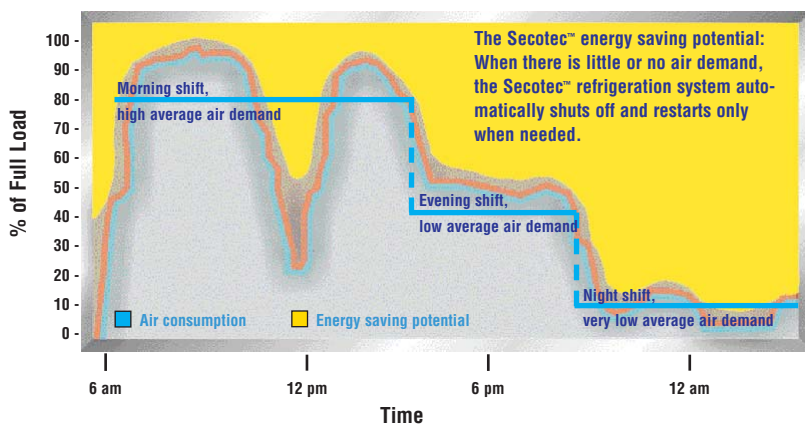

energy because the refrigerant system is shut off.

In a three-shift operation with 100%, 75% and 50% loads, respectively, and power costs of \$.08 per kWh, the Secotec TF203 costs under \$1500 per year to operate. A similarly sized non-cycling dryer costs nearly \$2400. The Secotec solution's 40% power savings pays back in 3 years.

## Operation

Warm compressed air entering the dryer is initially cooled in the air-to-air heat exchanger by the cold compressed air leaving the evaporator. This increases efficiency by reducing the heat load on the refrigeration system.



The air is then cooled to the dew point temperature by a refrigerant\* circuit with a thermal storage medium. The chilled air leaving the evaporator is reheated in the air-to-air heat exchanger before exiting the dryer. Reheating the compressed air recovers energy and eliminates pipe sweating down-stream.


The condensate formed by the cooling action is collected by a multi-stage, stainless steel moisture separator. Then an automatic condensate drain reliably removes the water without wasting valuable compressed air.

\* All Kaeser Secotec dryers use environmentally-friendly R 134a refrigerant.

# Convenient Features

## Dryer Construction

All components such as heat exchangers, refrigerant circuit, condensate separator, and drain are conveniently accessible when the side panels are removed. Service connections are provided at the suction and discharge lines to check the refrigerant circuit. The dryer construction and component arrangement minimize the floor space required for installation.

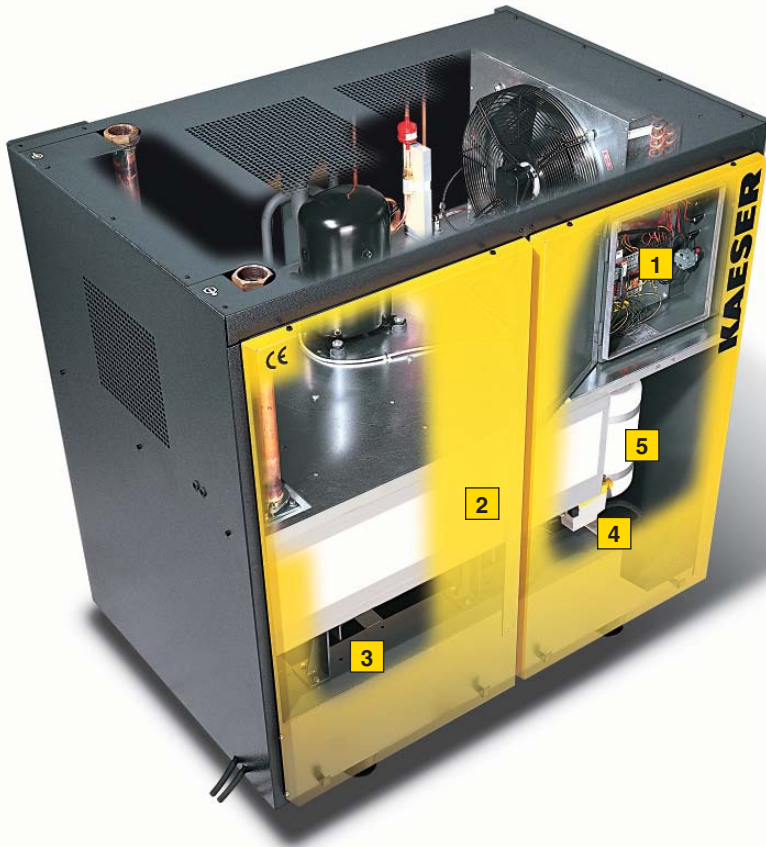


## 1 Easy and Reliable Controls

Control panel includes dew point indicator, on/off switch, and LED's indicating "power on" (active thermal storage) and "compressor on." LED's for "high dew point" are standard on models TE 91 and up and drain alarm LED is standard on TE 121 thru TF 251.

## 2 Heat Exchangers

Air-to-air and thermal storage-to-refrigerant heat exchangers are fitted with oversized copper tubing that provides low pressure drop. The smooth inner walls of the tubing also prevent fouling.

*Three-year warranty on heat exchangers. Two-year warranty on all other parts and labor.*

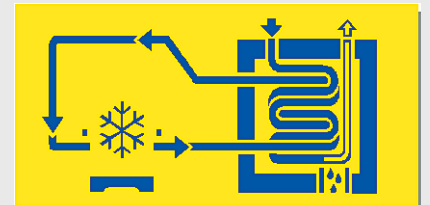


## 3 Thermal Storage

Solid media acts as storage for efficient cooling and eliminates the possibility of leakage, thereby eliminating the need for "top-off" and additives.

## 4 Electronic Demand Drain

Once condensate fills the collection chamber, a level sensor opens a diaphragm valve to drain the condensate. The valve then shuts before costly air can escape.

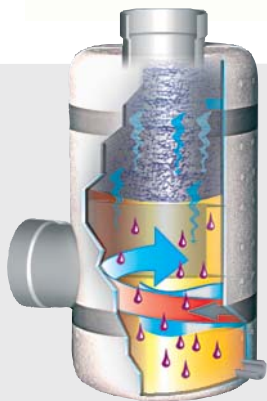

## 5 Separator

Highly efficient multistage, stainless steel separator uses centrifugal force and a stainless steel wire mesh to separate 99.9% of liquid water.



## Specifications

Model	Rated Capacity* (scfm)	Power Supply (V / Ph / Hz)	Full Load Power Consumption (kW)	Inlet / Outlet Connections (in.)	Dimensions W x D x H (in.)	Weight (lb.)	
TA 5	20	115 / 1 / 60	0.33	1/2	19 x 25 x 30	175	
TA 8	30			3/4	19 x 25 x 34	176	
TA 11	45						
TB 19	70	115 / 1 / 60	0.62	1	22 x 25 x 40	255	
TB 26	95						
TC 31	115						
TC 36	135	230 / 1 / 60	1.22	1-1/4	26 x 31 x 45	342	
TC 44	170	230 / 1 / 60			26 x 37 x 45	440	
TD 51	200	230 / 3 / 60			1.32	1-1/2	31 x 44 x 51
TD 61	240	460 / 3 / 60	2.10	31 x 44 x 52			632
TD 76	285						
TE 91	360	460 / 3 / 60	1.56	2	42 x 59 x 62	1256	
TE 121	460		1.98			1455	
TE 141	520		2.38			1455	
TF 173	600		2.90				2-1/2
TF 203	720		2.80				3
TF 251	885	3.32	1874				

\*Rated capacity: Based on compressed air saturated at 100°F and 100 psig and operation in a 100°F ambient.

- Maximum inlet temperature: 130°F
- Maximum/minimum ambient air temperature:
  - Air-cooled dryers: 110/40°F
  - Water-cooled dryers: 130/40°F
- Maximum allowable working pressure: 230 psig

Specifications are subject to change without notice.

## Selecting the Proper Dryer

To correct Rated Capacity for actual operating conditions, refer to “Capacity Correction Factors for Operating Conditions” and “Capacity Correction Factors for Ambient Temperature”. Find the capacity correction factors corresponding to the inlet and ambient conditions. Multiply these factors to find the “overall” capacity correction factor, then multiply any dryer’s rated capacity by the overall correction factor to determine its capacity at your operating conditions. Capacity correction factors for conditions not shown may be interpolated.

## Capacity Correction Factors for Operating Conditions

Pressure (psig)	Temperature (°F)										
	75	80	85	90	95	100	105	110	115	120	130
20	1.03	0.89	0.79	0.70	0.67	0.64	0.53	0.48	0.45	0.40	0.33
40	1.19	1.02	0.91	0.81	0.77	0.74	0.60	0.55	0.51	0.46	0.38
60	1.37	1.18	1.05	0.93	0.88	0.85	0.69	0.64	0.59	0.53	0.44
75	1.47	1.26	1.12	1.00	0.95	0.91	0.75	0.68	0.64	0.56	0.47
100	1.61	1.39	1.23	1.10	1.04	1.00	0.82	0.75	0.70	0.62	0.52
110	1.65	1.42	1.26	1.12	1.06	1.02	0.84	0.77	0.71	0.63	0.53
125	1.72	1.48	1.31	1.17	1.11	1.06	0.87	0.80	0.74	0.66	0.55
145	1.77	1.53	1.36	1.21	1.14	1.10	0.90	0.83	0.77	0.68	0.57
175	1.85	1.60	1.42	1.26	1.20	1.15	0.94	0.86	0.80	0.71	0.60
200	1.92	1.65	1.47	1.31	1.24	1.19	0.98	0.90	0.83	0.74	0.62
230	1.99	1.71	1.52	1.36	1.29	1.23	1.01	0.93	0.86	0.77	0.64

## Capacity Correction Factors for Ambient Temperature

Factor	Ambient Air Temperature (°F)							
	75	80	85	90	95	100	105	110
	1.15	1.12	1.09	1.06	1.03	1.00	0.97	0.94



Built for a lifetime™

www.kaeser.com

**Kaeser Compressors, Inc.**  
 511 Sigma Drive  
 Fredericksburg, VA 22408 USA  
 Telephone: 540-898-5500  
 Toll Free: 800-777-7873  
 info.usa@kaeser.com

**Kaeser Compressors Canada Inc.**  
 3760 La Verendrye Street  
 Boisbriand, QC J7H 1R5 CANADA  
 Telephone: (450) 971-1414  
 Toll free: (800) 477-1416  
 info.canada@kaeser.com

**Kaeser Compresores de México S de RL de CV**  
 Calle 2 #123  
 Parque Industrial Jurídica  
 76100 Querétaro, Qro.  
 Telephone: 01 (442) 218 64 48  
 sales.mexico@kaeser.com

**Kaeser Compresores de Guatemala y Cia. Ltda.**  
 Calzada Atanasio Tzul 21-00,  
 Zona 12, Complejo Empresarial  
 El Cortijo II, Bodega 501  
 01012 Guatemala  
 Telephone: +502 2412-6000  
 info.guatemala@kaeser.com

Certified Management Systems

